

# Hose Type 6/4M

ID6 - Series: MB





## Applications



- Hydraulics:** Hydraulic tools (instrumentation packages for gauges, control of service equipment, hydraulic jacks, hydraulic tools)
- Oil and Gas:** Methanol service (oil rigs, distribution panels, umbilicals), jumper/ subsea well control, control of subsea hydraulic components, nitrogen service


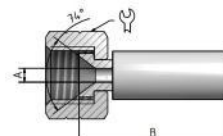
## Technical Information


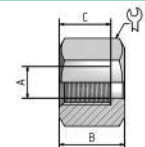
- Inner Core:** BESNO P40 TLO (PA II)
- Pressure Support:** 4 layers of high-tensile steel wire
- Outer Cover:** Polyamide (PA)
- Colour:** Dark blue
- Temperature:** -30°C to +60°C [-22°F to 140°F]

Ø ID	Ø OD	Working Pressure -- (SF 4,0:1)	Burst Pressure	Bend Radius	Weight	Insert ID
6,0 mm	13,0 mm	--	1.035 bar	180 mm	0,338 kg/m	3,0 mm
0,24 inch	0,51 inch	--	15.000 psi	7,09 inch	0,226 lbs/ft	0,12 inch


Part no.	Thread	Material	Dimensions (mm)				Sleeve
			A	B	C		
Sleeve							
10640185W	-	AISI 316Ti	19,9	54	-	-	

Part no.	Thread	Material	Nut	Dimensions (mm)				Insert
				A	B	C		
MP fitting								
40640305MB	3/8"x24UNF LH	AISI 316Ti	-	3	100	20	-	

Part no.	Thread	Material	Nut	Dimensions (mm)				Insert
				A	B	C		
JIC female swivel								
20640645MB	9/16"x18UNF	AISI 316Ti	50540605	3	71	-	19	

Part no.	Thread	Material	Relief bores	Dimensions (mm)				Swivel nut
				A	B	C		
Swivel nut								
50540605	9/16"x18UNF	AISI 316Ti	1 radial	9,2	18	14	19	

Part no.	Mesh length (mm)	Overall length (mm)	Breaking strength (kN)	Suitable for SPIR STAR® hose outer diameter (mm)	Hose securing grip
Hose securing grip short version					
9056400	600,00	740,00	10,20	10-15	



Production-related variations of the burst pressure of up to 5 % are possible. Other colours upon request.

The safety factors between the burst pressure and the working pressure as well as the test pressure depend on the operating conditions. For gaseous media the outer cover is to be pinpricked.

Regarding the safety factor for gaseous media please contact your local SPIR STAR® assembling center.

The indicated working pressure refers to the hose only. Depending on the used fitting the permitted working pressure of a hose assembly may be less.

\*) Blast-Pro® fittings may only be used for tube cleaning operations inside the tube. They have not been designed for the use outside of tubes.

We reserve our rights for technical changes without notice. Subject to printing errors.